


REMOVAL AND INSTALLATION

Headliner

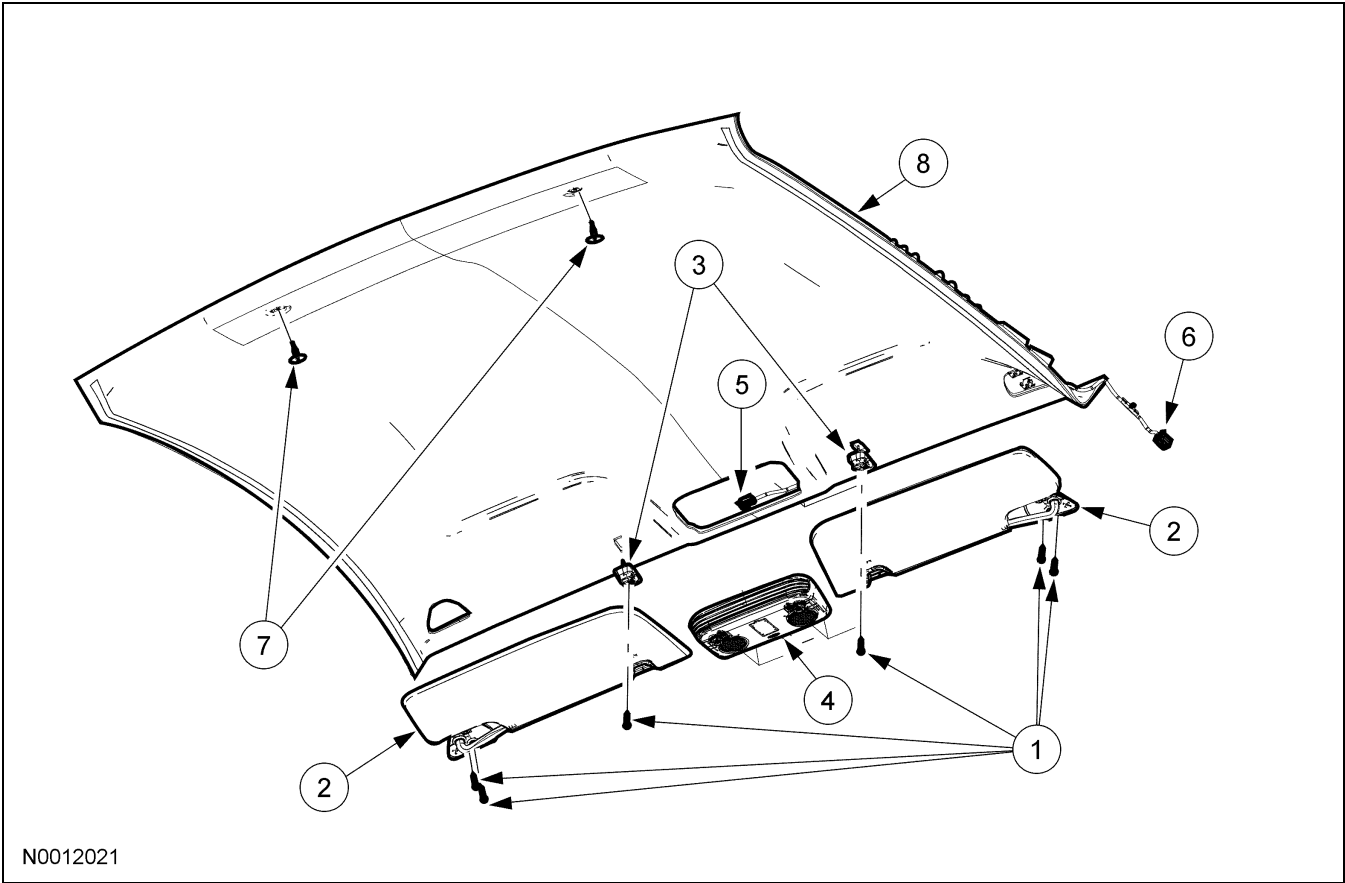

Item	Part Number	Description
1	—	Sun visor screws (6 required)
2	6304104/ 6304105	Sun visors (2 required) (RH/LH)
3	6304132	Sun visor arm clips (2 required)
4	519A58	Overhead console
5	—	Overhead console electrical connector (part of 14A464)
6	—	Headliner electrical connector (part of 14484)
7	W709950-S	Headliner pin-type retainers (2 required)
8	6351916	Headliner

2. Remove the 6 sun visor screws, the 2 sun visors, and the 2 sun visor arm clips.
3. Remove the overhead console.
 - Disconnect the electrical connector.
4. Remove the 2 headliner pin-type retainers.
5. Disconnect the headliner electrical connector and remove the headliner.

Removal and Installation

1. Remove the quarter window trim panel. For additional information, refer to Quarter Window Trim Panel in this section.

REMOVAL AND INSTALLATION (Continued)

6. **NOTE:** A new headliner will need to be installed if it is folded during removal or installation.

To install, reverse the removal procedure.
