


Rear Quarter Trim Panel


Removal

NOTE: *RH side shown, LH side similar.*

1. Remove the load space trim panel.
Refer to: [Loadspace Trim Panel - Coupe](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Release the clips, disconnect the tether clip and remove the D-pillar trim panel.

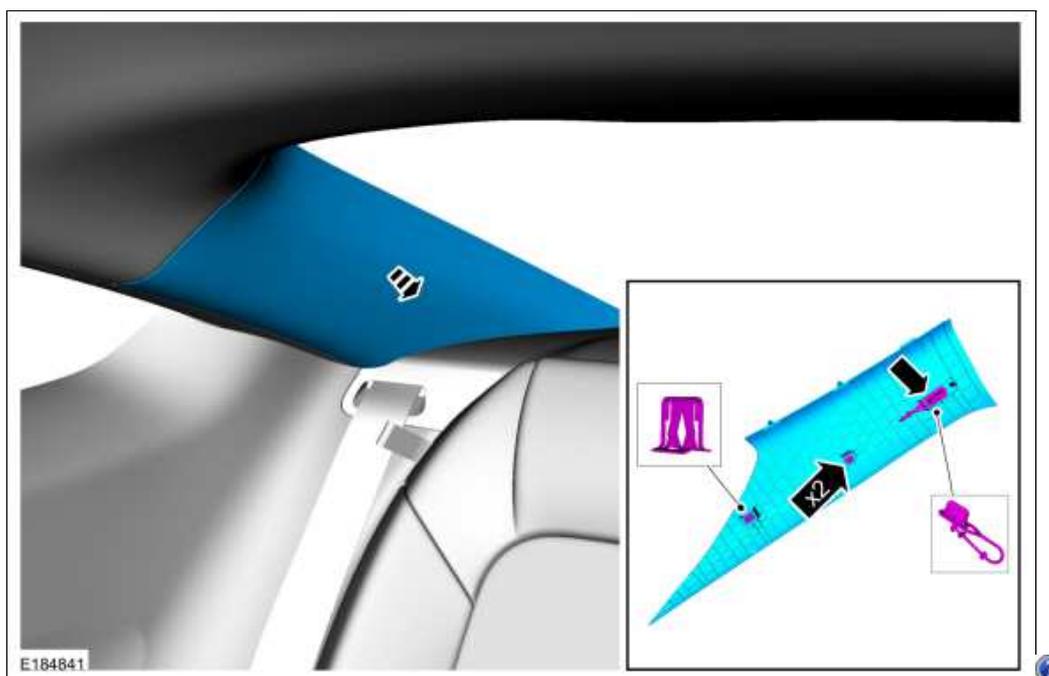

3. Remove the rear quarter trim panel.
 1. Open the garment hook retainer cover.
 2. Remove the retainer and the garment hook.
 3. Release the clips and remove the rear quarter trim panel.

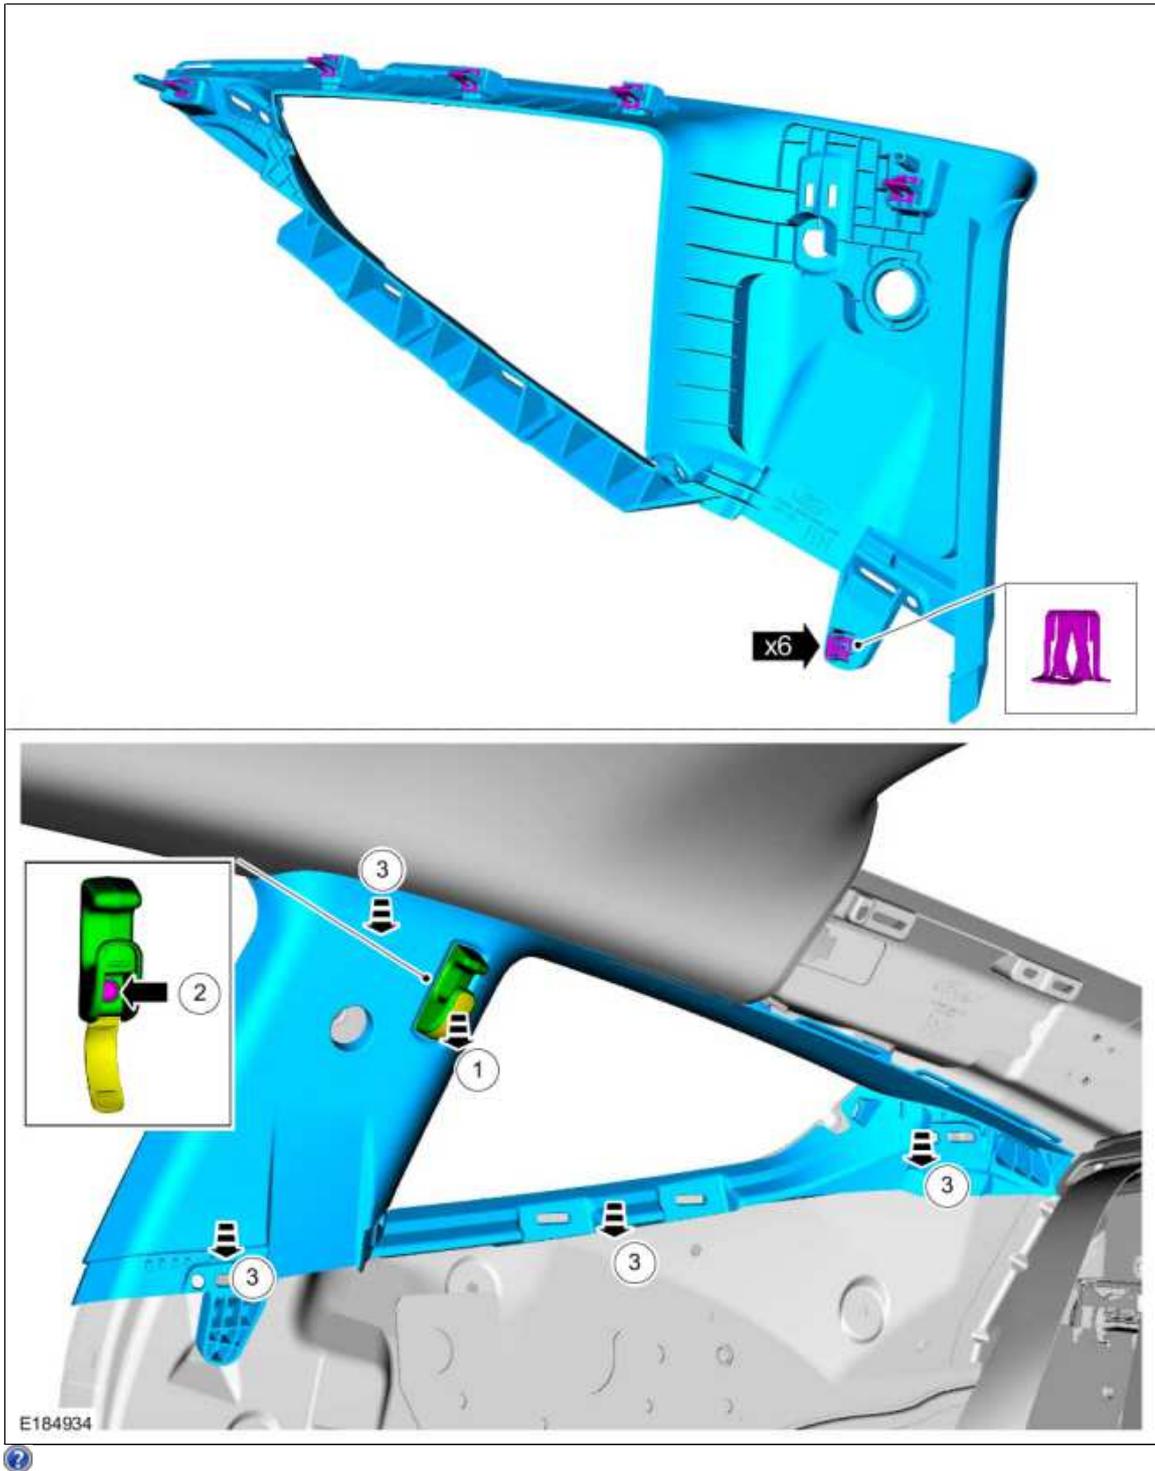

Installation

1. To install, reverse the removal procedure.